

## LE-547P

				547P
Figure	Key Number	Part Number	Description	
8	230	60035	Diaphragm Support (B40)	1
8	261	305-0976-120	Diaphragm Assembly (B40)	1
7	280	021-0760-016	Diaphragm Head (B40)	1
8	290	435-0035-655	Hex Head Screw, M8 x 90 mm	6
8	300	434-0005-085	Flat Washer, M8	6
10	419		Seal (See Notes 1 & 2)	
10	420		Seat (See Notes 1 & 2)	
10	421		Ball (See Note 2)	
10	422		Ball (See Notes 1 & 2)	
10	423		Seat, Seal, Ball - Set (See Notes 1 & 2)	
10	424		Ball Guide (See Notes 1 & 2)	
10	425	305-0876-602	Check Valve Assembly (See Notes 1 & 2)	2
10	445	60135	Coupling, 1" BSP x 1/2" NPT	2
		Note 1:	Item 425 (Check Valve Assembly) Consists of Items 424 (Ball Guide), 420 (Seat), 422 (Ball), and 419 (Seal).	
		Note 2:	B40 stainless steel check valve does not contain a removable ball seat (seat is integral to ball guide). Ball guide, ball and seal are not sold separately. Replacement requires purchase of the complete check valve assembly (part number 305-0876-602).	
		<a href="#">Figure 7:</a>	Series G Basic Parts - Side View	
		<a href="#">Figure 8:</a>	Series G Basic Parts - Top View	
		<a href="#">Figure 10:</a>	B40 Metallic Check Valve Parts	