

LE-581P

| | | | | 581P |
|--------|------------|----------------------------|---|------|
| Figure | Key Number | Part Number | Description | |
| 13 | 225 | 60165 | Adapter Ring | 1 |
| 13 | 227 | 435-0003-473 | Socket Head Screw, M8 x 25 mm | 6 |
| 8 | 230 | 60159 | Diaphragm Support (B80) | 1 |
| 8 | 261 | 60227 | Diaphragm Assembly (B80) | 1 |
| 7 | 280 | 60164 | Diaphragm Head (B80) | 1 |
| 8 | 290 | 435-0036-035 | Hex Head Screw, M12 x 110 mm | 6 |
| 8 | 300 | 434-0055-073 | Flat Washer, M12 | 6 |
| 13 | 302 | 434-0009-095 | Lockwasher, M12 | 6 |
| 13 | 305 | 435-0000-085 | Hex Nut, M12 | 6 |
| 11 | 419 | | Seal (See Notes 1 & 2) | |
| 11 | 420 | | Seat (See Notes 1 & 2) | |
| 11 | 422 | | Ball (See Notes 1 & 2) | |
| 11 | 423 | 305-0629-500 | Seat, Seal, Ball - Set (See Notes 1 & 2) | 2 |
| 11 | 424 | 003-0106-070 | Ball Guide | 2 |
| 11 | 425 | 305-0629-009 | Check Valve Assembly (See Note 1) | 2 |
| 11 | 435 | 432-0236-058 | Union Nut | 2 |
| 11 | 445 | 60132 | Union End, 1" FNPT | 2 |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | Note 1: | Item 425 (Check Valve Assembly) Consists of Items 424 (Ball Guide), 420 (Seat), 422 (Ball), and 419 (Seal). | |
| | | | | |
| | | Note 2: | Item 423 (Seat, Seal, Ball - Set) Consists of Items 420 (Seat), 419 (Seal), and 422 (Ball), which are not sold separately | |
| | | | | |
| | | | | |
| | | Figure 7: | Series G Basic Parts - Side View | |
| | | Figure 8: | Series G Basic Parts - Top View | |
| | | Figure 11: | B60 & B80 Plastic Check Valve Parts | |
| | | Figure 13: | B80 Liquid End Adapter Parts | |
| | | | | |