

LE-498SP, TP, BP, HP

| | | | 498SP | 498TP | 498BP | 498HP |
|--|-------------|--------------------------------------|-------|-------|-------|-------|
| Key Number | Part Number | Description | | | | |
| 1 | 27352 | Flapper Valve | 1 | 1 | 1 | 1 |
| 2 | 37351 | Injection Check Valve Body, PVC | 1 | 1 | 1 | 1 |
| 3 | 37341 | Injection Check Valve Spring, H-C | 1 | 1 | 1 | 1 |
| 4 | 10338 | Check Valve Ball, Ceramic, .375 | 1 | 1 | 1 | 1 |
| 5 | | Seal Ring | | | | |
| 6 | 36307 | Cartridge Valve, .375, PVDF/Polyprel | 3 | 3 | 3 | 3 |
| 7 | 36103 | Cartridge Valve O-Ring | 3 | 3 | 3 | 3 |
| 8 | 36107 | Cartridge Valve Washer | 3 | 3 | 3 | 3 |
| 9 | | Valve Seat | | | | |
| 10 | | Clamp Ring | | | | |
| 11 | | Ferrule | | | | |
| 12 | | Clamp Sleeve | | | | |
| 13 | | Tubing Adapter | | | | |
| 14 | | Coupling Nut | | | | |
| 15 | | Tubing | | | | |
| 16 | 37767 | Valve Housing, PVC | 3 | 3 | 3 | 3 |
| 17 | 38062 | Multi-Function Valve, 3FV, PVC | | 1 | | |
| | 37983 | Multi-Function Valve, 4FV, PVC | 1 | | | 1 |
| | 37984 | Multi-Function Valve, B4FV, PVC | | | 1 | |
| 18 | | High-Viscosity Spring | | | | |
| 19 | 30917 | Liquifram, 0.9 | 1 | 1 | 1 | 1 |
| 20 | 37739 | Pump Head, 0.9, PVC | 1 | 1 | 1 | 1 |
| 21 | 10340 | Pump Head Screw, SS | 4 | 4 | 4 | 4 |
| 22 | | Suction Tubing | | | | |
| 23 | 36204 | Foot Valve Seat | 1 | 1 | 1 | 1 |
| 24 | 10123 | Foot Valve Screen | 1 | 1 | 1 | 1 |
| 25 | | High-Viscosity Valve Seat | | | | |
| 26 | | H.V. Tubing Clamp | | | | |
| 27 | | H.V. Suction Tubing | | | | |
| 28 | | H.V. Tubing X 1/2 Connector | | | | |
| 29 | 38028 | Injection Check Valve Assembly | 1 | 1 | 1 | 1 |
| 30 | | Discharge Valve Assembly | | | | |
| 31 | 38021 | Suction Valve Assembly | 1 | 1 | 1 | 1 |
| 32 | HALE498TP | Pump Head Assembly | | 1 | | |
| | HALE498SP | | 1 | | | |
| | HALE498BP | | | | 1 | |
| | HALE498HP | | | | | 1 |
| 33 | 38034 | Foot Valve Assembly | 1 | 1 | 1 | 1 |
| 34 | 37340 | Injection Seat PTFE | 1 | 1 | 1 | 1 |
| 35 | 10322 | Ceramic Weight | 1 | 1 | 1 | 1 |
| 36 | 25636-10 | Return Line | 1 | 1 | 1 | 1 |
| 37 | 36260 | Cap ASM P/R (Black Knob) | 1 | 1 | | 1 |
| 38 | 36280 | Cap ASM A/S (Yellow Knob) | 1 | | 1 | 1 |
| 39 | 38065 | Multi-Function Valve Body, 3FV, PVC | | 1 | | |
| | 37989 | Multi-Function Valve Body, 4FV, PVC | 1 | | | 1 |
| | 37989 | Multi-Function Valve Body, B4FV, PVC | | | 1 | |
| 40 | 25628 | Nut Multi-Function Valve | 4 | 4 | 4 | 4 |
| 41 | 25627 | Screw Multi-Function Valve | 4 | 4 | 4 | 4 |
| 42 | 25631 | Return Line Coupling Nut | 1 | 1 | 1 | 1 |
| 43 | 34876 | Adjustment Screw B/4FV | | | 1 | |
| 44 | 32171 | Cap B/4FV | | | 1 | |
| 45 | 34868 | Plug B/4FV | | | 1 | |
| 46 | 32173 | Gasket B/4FV | | | 1 | |
| 47 | 32175 | Small O-Ring B/4FV | | | 1 | |
| 48 | 32176 | Large O-Ring B/4FV | | | 1 | |
| 49 | 38792 | AutoPrime Valve, PVC | | | | 1 |
| *Parts Included in RPM-392/398 - Repair & Preventative Maintenance Kit (Spare Parts) | | | | | | |
| Additional Parts Included in Kit: | | | | | | |
| | 10973 | Shaft Seal | 1 | 1 | 1 | 1 |
| | 10340 | Screw (for old-style head) | 4 | 4 | 4 | 4 |