

LE-630

			630
Key Number	Part Number	Description	
1		Flapper Valve	
2	25108	Injection Check Valve Body, PP	1
3	37341	Injection Check Valve Spring	1
4	10138	Check Valve Ball, Ceramic	4
5	25128	Seal Ring, PTFE	4
6		Cartridge Valve	
7		Cartridge Valve O-Ring	
8		Cartridge Valve Washer	
9	26001	Valve Seat, PVC, 1/2" NPT	2
10		Clamp Ring	
11		Ferrule	
12		Clamp Sleeve	
13		Tubing Adapter	
14		Coupling Nut	
15		Tubing	
16	26024	Valve Housing, PVC, 1/2" NPT	2
17		Multi-Function Valve, 3FV	
		Multi-Function Valve, 4FV	
		Multi-Function Valve, B4FV	
18		High-Viscosity Spring	
19	37863	Liquifram, 6.0	1
20	25718	Pump Head, Acrylic, 6.0	1
21	10340	Pump Head Screw	4
22		Suction Tubing	
23	25600	Foot Valve Seat, PP	1
24	10123	Foot Valve Screen, PP	1
25		High-Viscosity Valve Seat	
26		H.V. Tubing Clamp	
27		H.V. Suction Tubing	
28		H.V. Tubing X 1/2 Connector	
29	26716	Injection Check Valve Assembly	1
30		Discharge Valve Assembly	1
31		Suction Valve Assembly	1
32	38608	Pump Head Assembly	1
33	26021	Foot Valve Assembly	1
34		Injection Seat PTFE	
35		Ceramic Weight	
36		Return Line	
37		Cap ASM P/R (Black Knob)	
38		Cap ASM A/S (Yellow Knob)	
39		Multi-Function Valve Body, 3FV	
		Multi-Function Valve Body, 4FV	
		Multi-Function Valve Body, B4FV	
40		Nut Multi-Function Valve	
41		Screw Multi-Function Valve	
42		Return Line Coupling Nut	
43		Adjustment Screw B/4FV	
44		Cap B/4FV	
45		Plug B/4FV	
46		Gasket B/4FV	
47		Small O-Ring B/4FV	
48		Large O-Ring B/4FV	