

## LE-637

			637
Key Number	Part Number	Description	
1		Flapper Valve	
2	26941	Injection Check Valve Body	(1)
3	37341	Injection Check Valve Spring	(1)
4	25042	Check Valve Ball	2 (4)
5	25128	Seal Ring, PTFE	2 (4)
6		Cartridge Valve	
7		Cartridge Valve O-Ring	
8		Cartridge Valve Washer	
9	26926	Valve Seat, SS	1 (2)
10		Clamp Ring	
11		Ferrule	
12		Clamp Sleeve	
13		Tubing Adapter	
14		Coupling Nut	
15		Tubing	
16	26928	Valve Housing, SS	1 (2)
17		Multi-Function Valve, 3FV	
		Multi-Function Valve, 4FV	
		Multi-Function Valve, B4FV	
18		High-Viscosity Spring	
19	37863	Liquifram, 6.0	1
20	27395	Pump Head, SS, 6.0	1
21	10340	Pump Head Screw	4
22		Suction Tubing	
23	26951	Foot Valve Seat, SS	(1)
24		Foot Valve Screen	
25		High-Viscosity Valve Seat	
26		H.V. Tubing Clamp	
27		H.V. Suction Tubing	
28		H.V. Tubing X 1/2 Connector	
29	27534	Injection Check Valve Assembly	(1)
30	27530	Discharge Valve Assembly	1
31	27531	Suction Valve Assembly	1
32	27532	Pump Head Assembly	1
33	27535	Foot Valve Assembly	(1)
34		Injection Seat PTFE	
35		Ceramic Weight	
36		Return Line	
37		Cap ASM P/R (Black Knob)	
38		Cap ASM A/S (Yellow Knob)	
39		Multi-Function Valve Body, 3FV	
		Multi-Function Valve Body, 4FV	
		Multi-Function Valve Body, B4FV	
40		Nut Multi-Function Valve	
41		Screw Multi-Function Valve	
42		Return Line Coupling Nut	
43		Adjustment Screw B/4FV	
44		Cap B/4FV	
45		Plug B/4FV	
46		Gasket B/4FV	
47		Small O-Ring B/4FV	
48		Large O-Ring B/4FV	